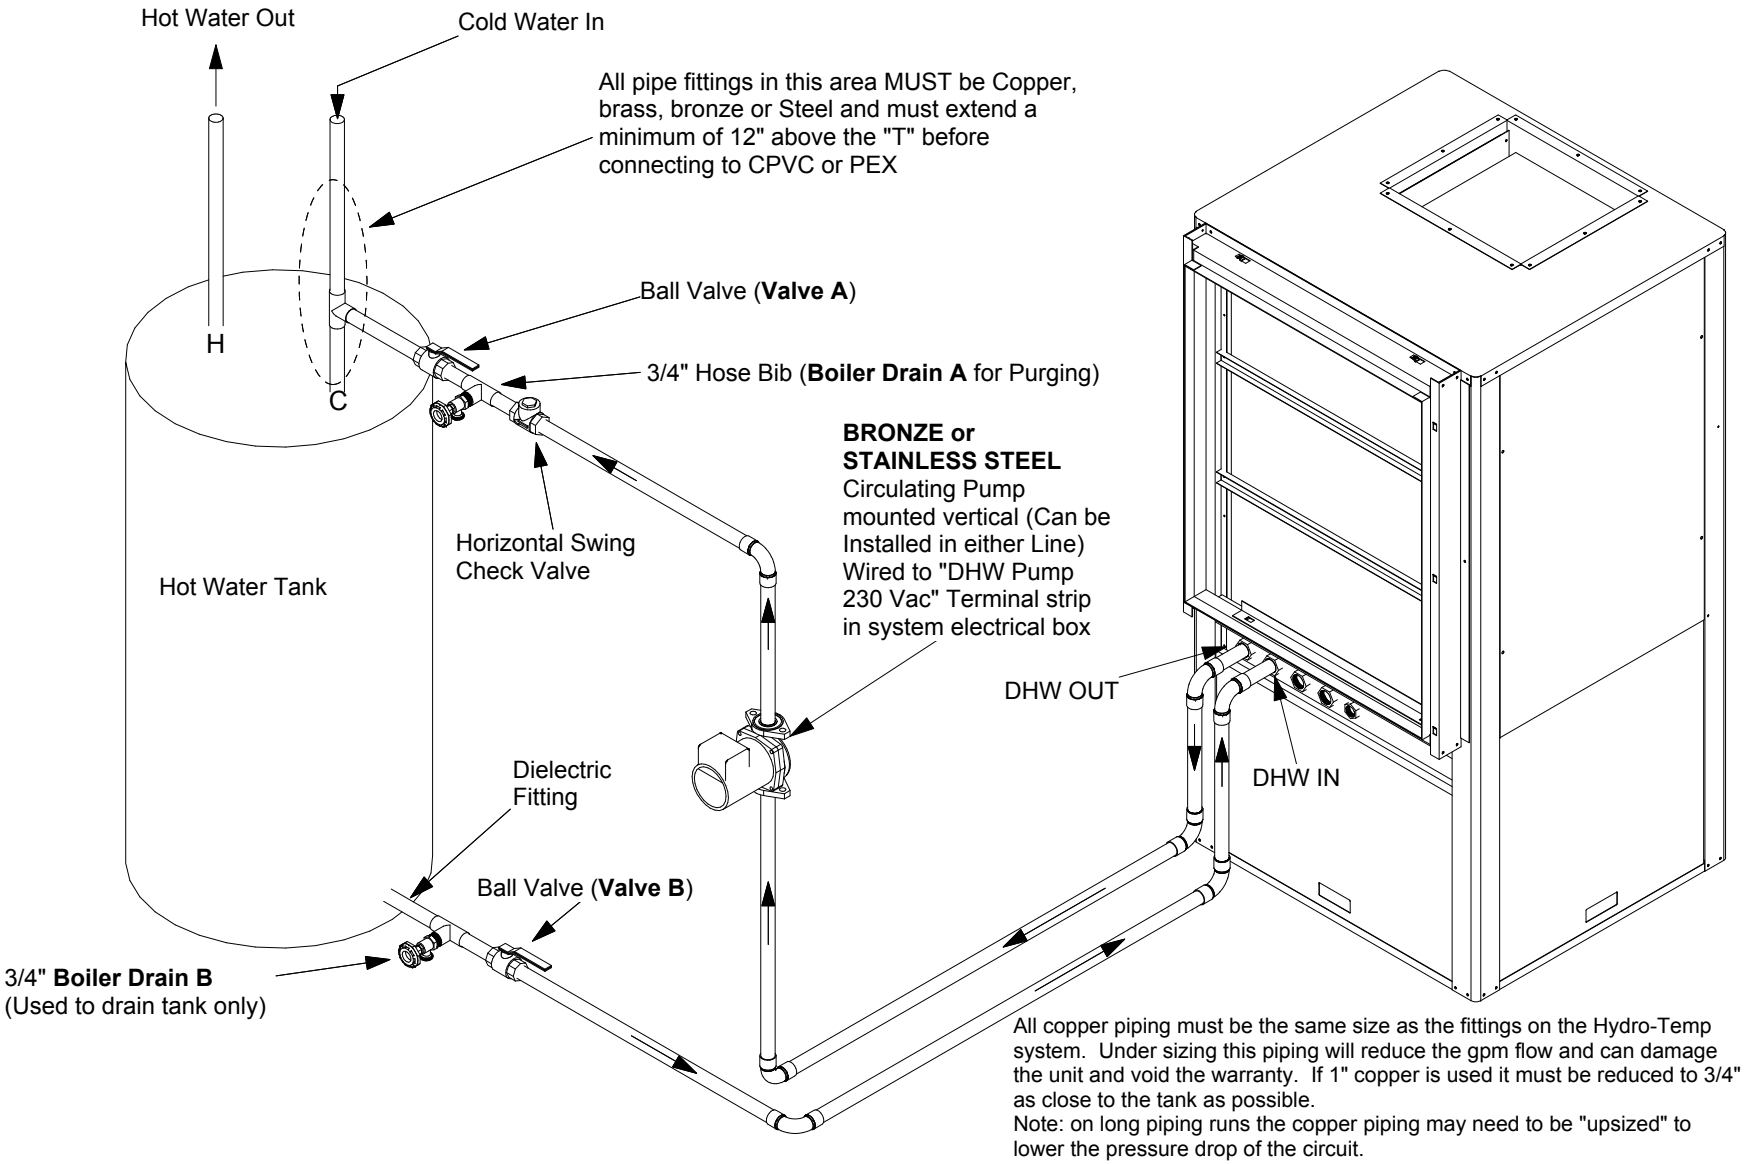

All copper piping must be the same size as the fittings on the Hydro-Temp system. Under sizing this piping will reduce the gpm flow and can damage the unit and void the warranty. If 1" copper is used it must be reduced to 3/4" as close to the tank as possible.
Note: on long piping runs the copper piping may need to be "upsized" to lower the pressure drop of the circuit.

THIS DRAWING, THE DESIGN AND DEVELOPMENTS ARE THE PROPERTY OF AND ARE NOT TO BE USED OR REPRODUCED IN ANY WAY WITHOUT WRITTEN CONSENT OF HYDRO-TEMP LTD.

Hydro-Temp GEOTHERMAL. NATURALLY.®

DWG. Title	DATE	DWG. NO.	REV
Single Hot water tank	06/12/2014 Edit Date 11/05/2015	H005672C	0